


AirSpeed®: How It Works



The success of our pioneering AirBeam® Technology has allowed us to develop and take it one step further. Our brand new valve system is designed to make using an AirBeam® tent even easier, eliminating the need to screw or unscrew a cap. Equally, the new Airspeed® valve is positioned in a more convenient location for inflating and deflating your tent.



STEP 1

To inflate remove the locking cap

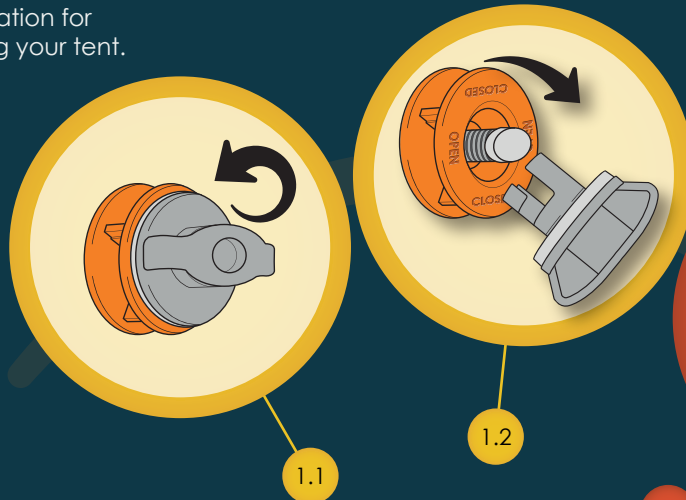

STEP 2

If starting with the valve in the **Open** position - turn the button to **CLOSED** before inflating. Alternatively turn the adaptor fully until it **Clicks**.

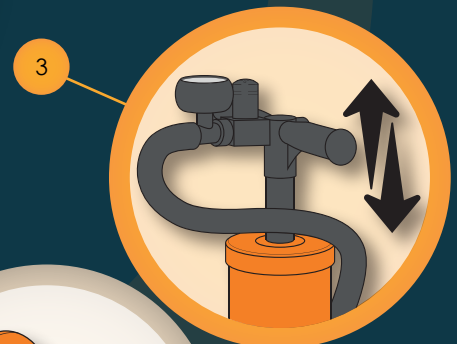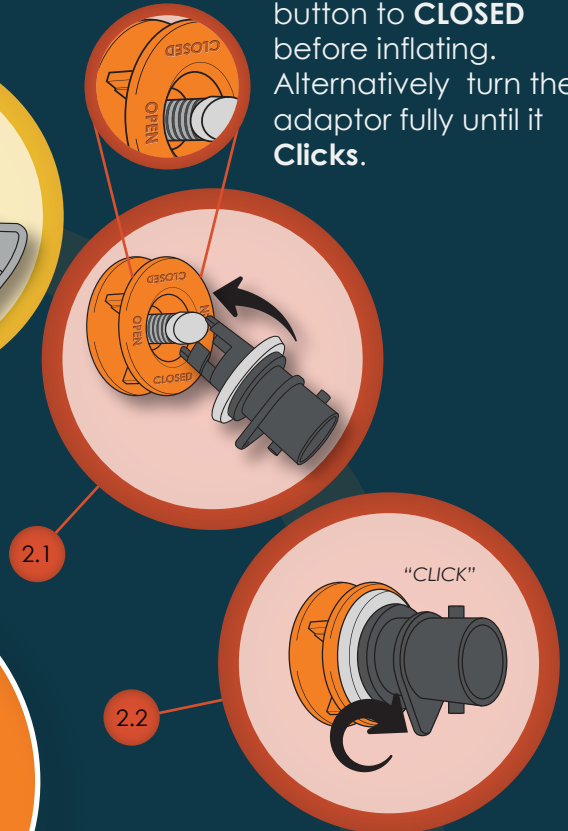


STEP 3

Inflate the AirBeam® to 7-8psi


STEP 5

To deflate the AirBeam® (remove the cap) **press & turn** the button from **CLOSED** to **OPEN**

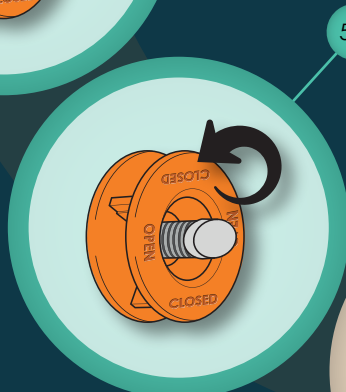

STEP 4

Replace cap on valve and turn to locked position

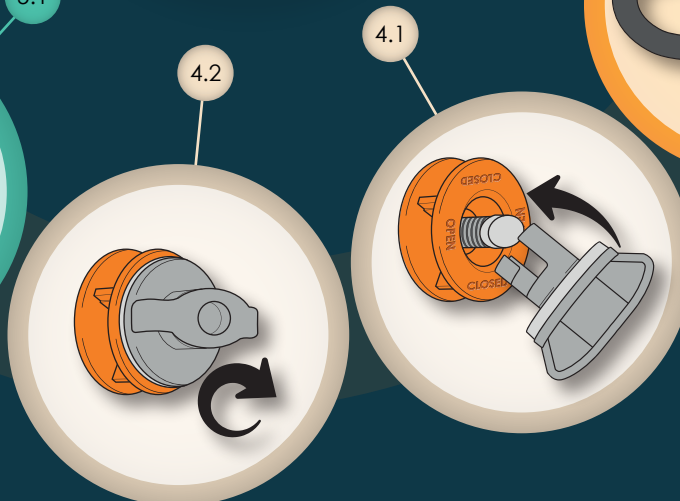

QUICK TIP

Top of the cap can be used as a key for cold, gloved, wet or less nimble fingers

